5-B-46

PRICE $5.00

POWER SUPPLY

INSTRUCTION MANUAL

kepco inc.®

131-38 SANFORD AVENUE • FLUSHING, N. Y. 11352
Area Code 212 IN 1-7000 • TWX # 212-539-6623

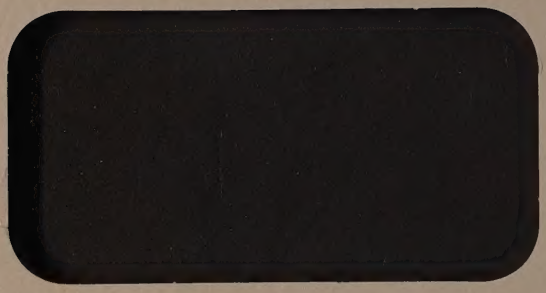

MODEL SC-32-1.5

SERIAL NO. 1291

KEPCO, INC.
131 - 38 Sanford Avenue
Flushing 55, New York

Kepco, Inc.
Flushing, New York

STANDARD POLICY COVERING REPRODUCTION AND USE OF TECHNICAL DATA FOR KEPCO MANUFACTURED EQUIPMENT

The technical data submitted, including manuals, parts information, and mechanical and electrical drawings, is furnished solely for the purpose of effecting maintenance and/or repairs to the apparatus therein described and the purchaser or the Government shall not reproduce, use, or disclose the said technical data, in whole or in part, for any other purpose. Such technical data shall not be used for promotional procurement, development or manufacturing purposes, nor shall the purchaser or the Government permit the reproduction, use, or disclosure of any part of said technical data by others. The purchaser shall notify the Government of the purchaser's limited right in the use of said technical data for aforesaid purposes. In the event that any part of this technical data is used by anyone for other than the above authorized purposes, the purchaser will give all assistance possible for the prosecution of action against any unauthorized use thereof.

KEPCO, INC.
131 - 38 Sanford Avenue
Flushing 55, New York

SEMI-CONDUCTOR

VOLTAGE REGULATED POWER SUPPLY

MODEL SC-32-1.5

OUTPUT VOLTAGE DC: 0-32 volts continuously variable.

OUTPUT CURRENT DC: 0-1.5 amperes continuous duty.

REGULATION: In the range 0-32 volts, the output voltage variation is less than 0.01% or 0.002 volt, whichever is greater, for load variation from 0 to 1.5 amperes, and less than 0.01% for line fluctuation from 105-125 volts.

RIPPLE VOLTAGE: Less than 1 millivolt RMS.

RECOVERY TIME: 50 microseconds.

STABILITY: The output voltage variation for a period of eight hours is less than 0.01% or 0.002 volt (whichever is greater). When this unit is turned on from a cold start, approximately 3/4 of an hour is required for the unit to reach equilibrium. The drift during the 3/4 hour period is less than 1%.

AMBIENT OPERATING TEMPERATURE: 50°C maximum. Over-temperature protection provided. Unit turns off when over-temperature occurs. Power on-off switch on front panel resets unit.

TEMPERATURE COEFFICIENT: Output voltage changes less than 0.01% per °C.

OUTPUT IMPEDANCE: Less than 0.01 ohm from DC to 1 KC. Less than 0.1 ohm from 1 KC to 100 KC.

SHORT CIRCUIT PROTECTION: When the load exceeds the maximum output current by 20% a transistor amplifier automatically increases the impedance

of the series pass transistors so that their wattage dissipation rating is never exceeded. A control which is available at the rear of the unit can be adjusted so that the over-current can be set from 0 to 120% of full load.

FUSE PROTECTION: Input fuse on front panel.

The negative reference supply and amplifier is separately fused. This fuse is located on the power supply chassis directly behind the front panel. This fuse has been designed into this unit to protect the reference amplifier in the event of any internal failure.

The voltage control circuit is separately fused. This fuse is located on the inside of the rear apron of the chassis below the output terminations. This fuse has been designed into this unit to protect the 10 turn voltage control in the event of any internal failure or accidental removing of jumper bars on the rear terminations when the unit is operating.

POWER REQUIREMENTS: 105-125 volts, 50-65 cycles.

OUTPUT TERMINATIONS: DC terminals are clearly marked on the front panel. All terminals are isolated from the chassis. Either positive or negative terminal of the DC output may be grounded. A terminal is provided for connecting to the chassis. The DC terminals are also brought out to a barrier terminal board at the rear of the unit.

Two terminals on the rear terminal board are provided for remotely sensing the error signal directly at the load. This connection compensates for the voltage drop in the wires connecting the power supply to the load.

Two terminals on the rear terminal board are provided for remotely controlling the output voltage. This feature is called "Remote Programming."

For each 300 ohms change in remote control resistance the output voltage changes by approximately one volt.

METERS: Voltmeter: 0-50 volts, 2-1/2" wide view.

Ammeter: 0-1.5 amperes, 2-1/2" wide view.

CONTROLS: Power on-off switch; ten turn voltage control on front panel; overload current control at the rear of the unit.

PHYSICAL SPECIFICATIONS: Height 3-1/2", width 19", depth 13", color Kepco standard gray hammertone. This unit is designed for bench use or relay rack mounting. Carrying handles are provided on the front panel.

OPERATING INSTRUCTIONS: This Semi-Conductor Voltage Regulated Power Supply is shipped without any internal packing material and may be put into operation immediately.

The remote error sensing terminals are connected directly to the rear output terminals by means of jumper bars on the barrier terminal board. The power supply is, therefore, set up for best regulation at either the front or rear output terminations.

The remote programming terminals are connected directly to the front panel voltage control by means of jumper bars on the barrier terminal board. The power supply is, therefore, set up for control of the output voltage from the front panel control.

PROCEDURE FOR OPERATING POWER SUPPLY FOR NON-REMOTE ERROR SIGNAL: Turn on the power switch. Adjust the DC voltage control to the desired output voltage. The load may either be connected to the front DC output terminals or the rear DC output terminals. If the load is connected to the rear output terminals, the voltage across the front panel

output terminals is regulated for load except for the very small drop in wires connecting front to rear terminals.

PROCEDURE FOR OPERATING POWER SUPPLY FOR REMOTE ERROR SIGNAL:

With the power supply turned off, remove the jumper bars from the remote error terminals located on the rear terminal board. Use twisted pair wire for connecting the + and - output terminals from the rear of the chassis to the load. Use another set of shielded twisted pair wires connecting the + and - remote error signal terminals to the load contacts. (See Figure I.)

PROCEDURE FOR OPERATING THE POWER SUPPLY FOR REMOTE PROGRAMMING OF THE OUTPUT VOLTAGE:

With the power supply turned off, remove the jumper bars from the remote programming terminals located on the rear terminal board. Use twisted pair wire for connecting the + and - remote programming terminals to the remotely located voltage control. (See Figure II.) The unit is set so that a resistance change of 300 ohms in the remotely located voltage control will cause a change in output voltage of approximately 1 volt.

Procedure for selecting the remote programming control - The remote control circuit is designed so that a change of 300 ohms causes a change in the output voltage of approximately 1 volt. To remotely change the voltage through the operating range 0 to 32 volts, it is necessary to change the remote control from 0 to 10,000 ohms. If remote control over a limited voltage range is desired (e.g.: 28 to 32 volts) the remote control must be changed from approximately 8,000 ohms to 10,000 ohms.

REMOTE ERROR CONNECTIONS

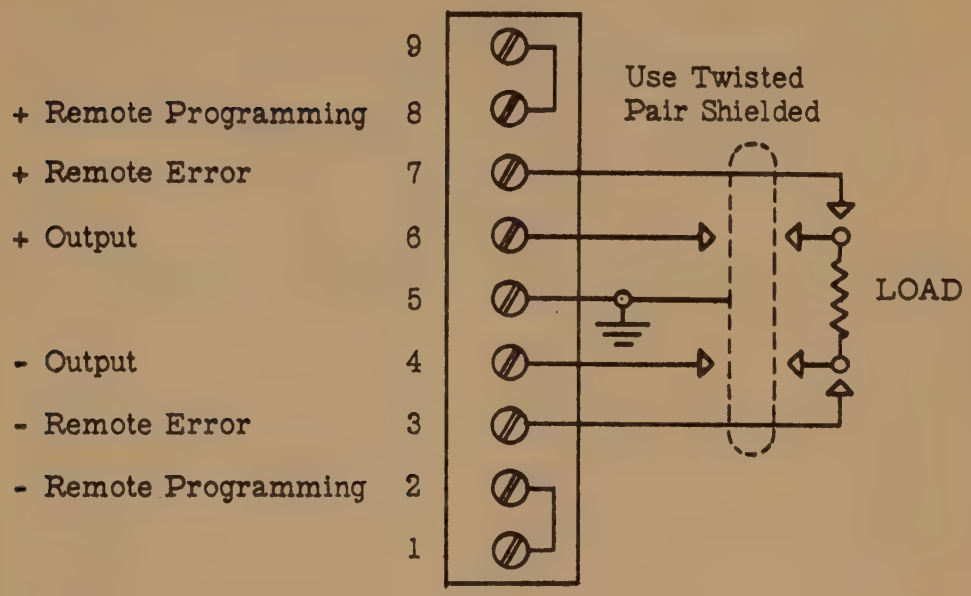

FIGURE I.

REMOTE VOLTAGE CONTROL CONNECTIONS

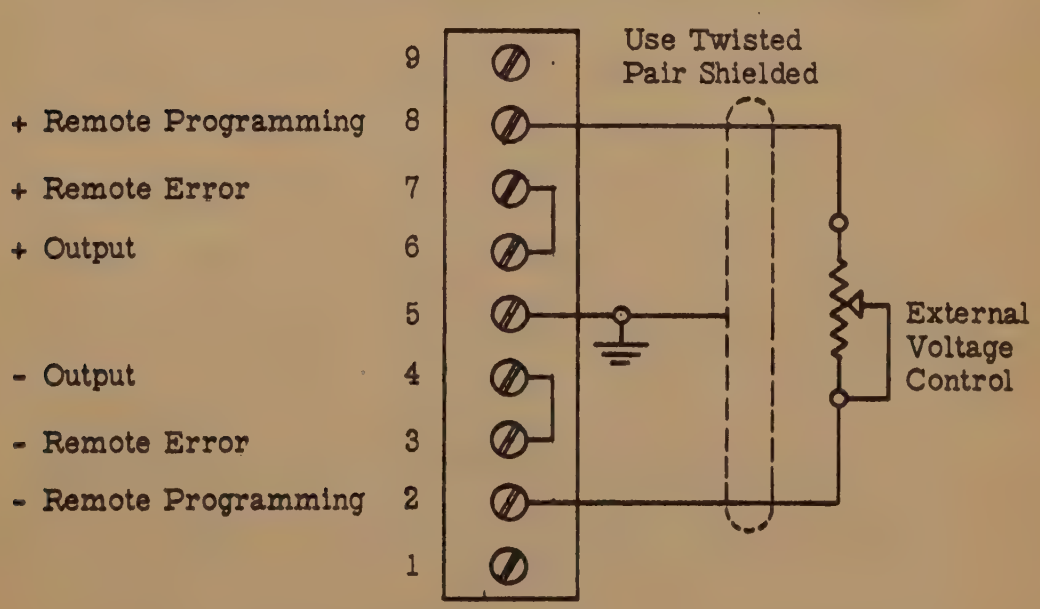

FIGURE II.

PROCEDURE FOR CONVERTING THIS VOLTAGE REGULATED POWER SUPPLY TO A CURRENT REGULATED POWER SUPPLY:

This supply can be operated in such a manner that a constant current rather than constant voltage can be maintained in the external load. Applications for this type of modification include maintaining constant current through magnet coils, solenoids, and filament loads.

Figure III indicates the external electrical modifications required for converting to a constant current mode of operation. The essential changes include removing the minus remote programming jumper, inserting a current sensing resistor R in series with the external load R_L , inserting a 2,000 MF capacitor across R_L , and a 500 ohm control for setting the constant current value.

The value of the current sensing resistor R is selected so that there is a 1 volt drop across it for maximum output current. For example: If the maximum current is to be 1.5 amperes R is 0.67 ohm. In this case, the output current can be set anywhere in the range 0 to 1.5 amperes with the constant current control.

When the supply is to be used at a much lower current level than the maximum output current, best current regulation can be achieved by selecting the largest value of current sensing resistor R. For example, if the maximum current is to be 0.1 ampere, the current sensing resistor R should be 10 ohms. For this case, the output current can be set anywhere in the range 0 to 0.1 ampere with the constant current control.

Constant current will be maintained throughout the impedance range 0 to R_L (MAX.). R_L (MAX.) is determined by the equation - R_L (MAX.) = V (MAX.)/I.

e.g.: V (MAX.) = 32 V, I = 0.5 A, R_L (MAX.) = 64 ohms.

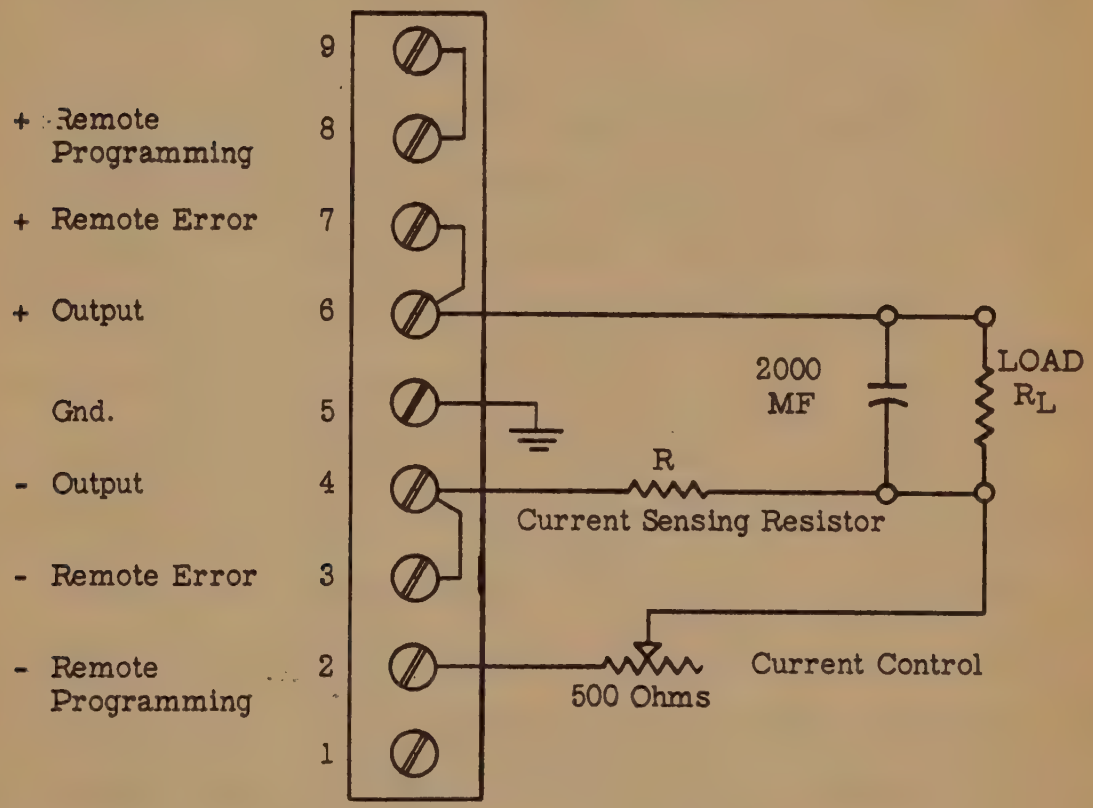

FIGURE III.

OVERLOAD PROTECTION DEVICE: The automatic current limiting device in this unit is part of the regulator amplifier circuit. When the current exceeds a pre-set value, the control amplifier increases the impedance of the pass elements so that the current never exceeds this pre-set value. This current has been set at approximately 120% of the maximum output current. Should it become necessary to readjust this overload current setting, a potentiometer, labelled "Overload Adjust", is available at the rear of the

unit. This control can be set from 0 to 120% of the maximum current rating of the power supply.

If it is desired to limit the maximum output current to a smaller value than the maximum current rating of the power supply, use the following procedure.

Example: To limit the output to 0.2 ampere, load the supply to at least 0.25 ampere, then turn the "Overload Adjust" control counter-clockwise until the output current reduces to 200 milliamperes. (For best regulation the "Overload Adjust" control should be set 20% higher than the maximum desired output current.)

OVER-TEMPERATURE PROTECTION: In the event of fan failure or accidental blocking of air vents, a temperature measuring device mounted on one of the series pass transistor elements will automatically turn the power supply off when the temperature is excessive. Check to see whether the air vents are blocked or the fan is rotating. The fan should be operating even though the power supply has been turned off by the over-temperature protection device. To turn the power supply on again, once an over-temperature condition has occurred, remove the external load from the power supply and wait approximately 3 to 5 minutes for the unit to cool off. After this interval turn the power switch OFF and then ON again. If the power goes off the unit has not cooled to a safe operating temperature. If the fan is operating properly and the air vents are clear, there may be internal failure and the internal difficulty should be removed in accordance with the Maintenance and Repair instructions.

If the supply is operating properly re-apply the load and let the unit operate for 10 to 15 minutes. Continued safe operation of the power supply may then be expected. If the supply shuts down with a load not exceeding the rated value of the supply, the unit should be serviced in accordance with the Maintenance and Repair instructions.

MAINTENANCE: The components of this Semi-Conductor Regulated Power Supply have been selected and tested to provide long and trouble free operating life. Replacement of transistors may be necessary on rare occasions. The transistors in the regulated reference supply and in the reference amplifier are easily accessible by removing the rear cover plate. This cover plate is fastened with six screws. The pass transistors are of a plug-in type and are accessible by removing the top cover plate.

Maintenance should be done only by qualified personnel who know transistor regulator circuitry. Serious and costly damage can result from inexperienced probing in the unit.

REPAIRS: Should any trouble develop in the instrument, it may be serviced with the aid of the schematic diagram. Major repairs, however, are usually handled by the factory.

Under no circumstances should the instrument be returned to the factory without proper authorization and shipping instructions. In any correspondence with the factory concerning repairs, the type and serial number of the instrument must be given together with a description of the trouble encountered.

with the Maintenance and Repair instructions.

MAINTENANCE: The components of this Semi-Conductor Regulated Power Supply have been selected and tested to provide long and trouble free operating life. Replacement of transistors may be necessary on rare occasions. The transistors in the regulated reference supply and in the reference amplifier are easily accessible by removing the rear cover plate. This cover plate is fastened with three screws. The pass transistors are of a plug-in type and are accessible by removing the power supply from its cabinet. To remove the power supply from its cabinet remove the four feet. The supply can then be removed by sliding the unit out through the front or rear opening.

Maintenance should be done only by qualified personnel who know transistor regulator circuitry. Serious and costly damage can result from inexperienced probing in the unit.

REPAIRS: Should any trouble develop in the instrument, it may be serviced with the aid of the schematic diagram. Major repairs, however, are usually handled by the factory.

Under no circumstances should the instrument be returned to the factory without proper authorization and shipping instructions. In any correspondence with the factory concerning repairs, the type and serial number of the instrument must be given together with a description of the trouble encountered.

PARTS LIST

DRAWING S-TRAM-4-01

C1	- 2	MF	200 WV
C2	- 0.02	MF	300 WV
C3	- 25	MF	25 WV
C4	- 0.1	MF	500 WV
CR1	- 1N91 Germanium Diode		
Q1	- 2N441	Transistor	
Q2 thru Q6	- 2N382	Transistor (Alternate 2N383)	
Q7	- 2N35	Transistor	
Q8	- 2N382	Transistor (Alternate 2N383)	
Q9	- GT-1092	Transistor	
Q10	- 2N35	Transistor	
R1	- 3.3	K	1/2 watt
R2	- 2.2	K	1/2 watt
R3	- 500	Ohm	3 watt WW
R4	- 500	Ohm	3 watt WW
R5	- 4.7	K	1/2 watt
R6	- 2.5	K	3 watt WW
R7	- 2.5	K	3 watt WW
R8	- 10	K	3 watt WW
R9	- 2.5	K	3 watt WW
R10	- 500	Ohm	3 watt WW
R11	- 50	Ohm	3 watt WW
R12	- 100	Ohm	3 watt WW
R13	- 1.85	K	1/2 watt WW
R14	- 10	Ohm	1/2 watt
R15	- 1.5	K	1/2 watt
R16	- 1.8	K	1/2 watt
R17	- 1.5	K	1/2 watt
R18	- 220	Ohm	1/2 watt
R19	- 1.5	K	1/2 watt
R20	- 1.5	K	1/2 watt
R21	- 2.7	K	1/2 watt
R22	- 10	Ohm	1/2 watt
R23	- 100	Ohm	1 watt
R24	- 500	Ohm	2 watt Pot.
R25	- 500	Ohm	2 watt Pot.
RD1	- 1N429 Diode		

PARTS LIST - MODEL SC-32-1.5

DRAWING S-SC-32-1.5-02

R205	- 2.2	K	1 watt
R206	- 1	K	1/2 watt
R207	- 2.2	K	2 watt
R208	- 120	Ohm	1 watt
R209	- 120	Ohm	1 watt
R210	- 10	Ohm	1/2 watt
R211	- 500	Ohm	20 watt
R212	- 47	Ohm	1/2 watt
R901 thru R906	- 1.5	Ohm	3 watt WW

RL201 and RL202	- DPDT Relay
S101	- DPDT Switch
S201	- Thermoswitch N. O.
S202	- Thermoswitch N. O.
T201	- Kepco #100-1052
T202	- Kepco #100-1039
TB201	- Jones #9-140-Y

PARTS LIST - MODEL SC-32-1.5

DRAWING S-SC-32-1.5-02

B201	- Fan		
B202	- Fan		
C201	- 3300	MF	50 WV
C202	- 2000	MF	80 WV
C203	- 60	MF	250 WV
C204	- 350	MF	50 WV
C205	- 500	MF	12 WV
C206	- 500	MF	12 WV
C207	- 100	MF	12 WV
C208	- 100	MF	12 WV
C209 thru C211	- 0.22	MF	200 WV
C212	- Omitted		
C213	- 0.05	MF	600 WV
C214	- 0.1	MF	500 WV
C215	- 0.22	MF	200 WV
CR201	- Silicon Diode TM-24		
CR202	- Silicon Diode TM-24		
CR203	- Silicon Rectifier PT-5		
CR204	- Silicon Rectifier PT-5		
CR205 thru CR212	- Germanium Rectifier 1N91		
F101	- 3 Amp. Fuse		
F201	- 1/4 Amp. Fuse		
F202	- 1/4 Amp. Fuse		
M101	- Meter, 0-1.5 A DC		
M102	- Meter, 0-50 V DC		
PL101	- Neon Pilot Light NE-51		
Q201	- 2N382 Transistor (Alternate 2N383)		
Q202	- 2N382 Transistor (Alternate 2N383)		
Q901 thru Q908	- 2N441-6 Transistor		
R101	- 10	K	10 turn Pot.
R201	- 500	Ohm	40 watt WW
R202	- 1.5	Ohm	3 watt WW
R203	- 1	K	1/2 watt
R204	- 2	K	1 watt

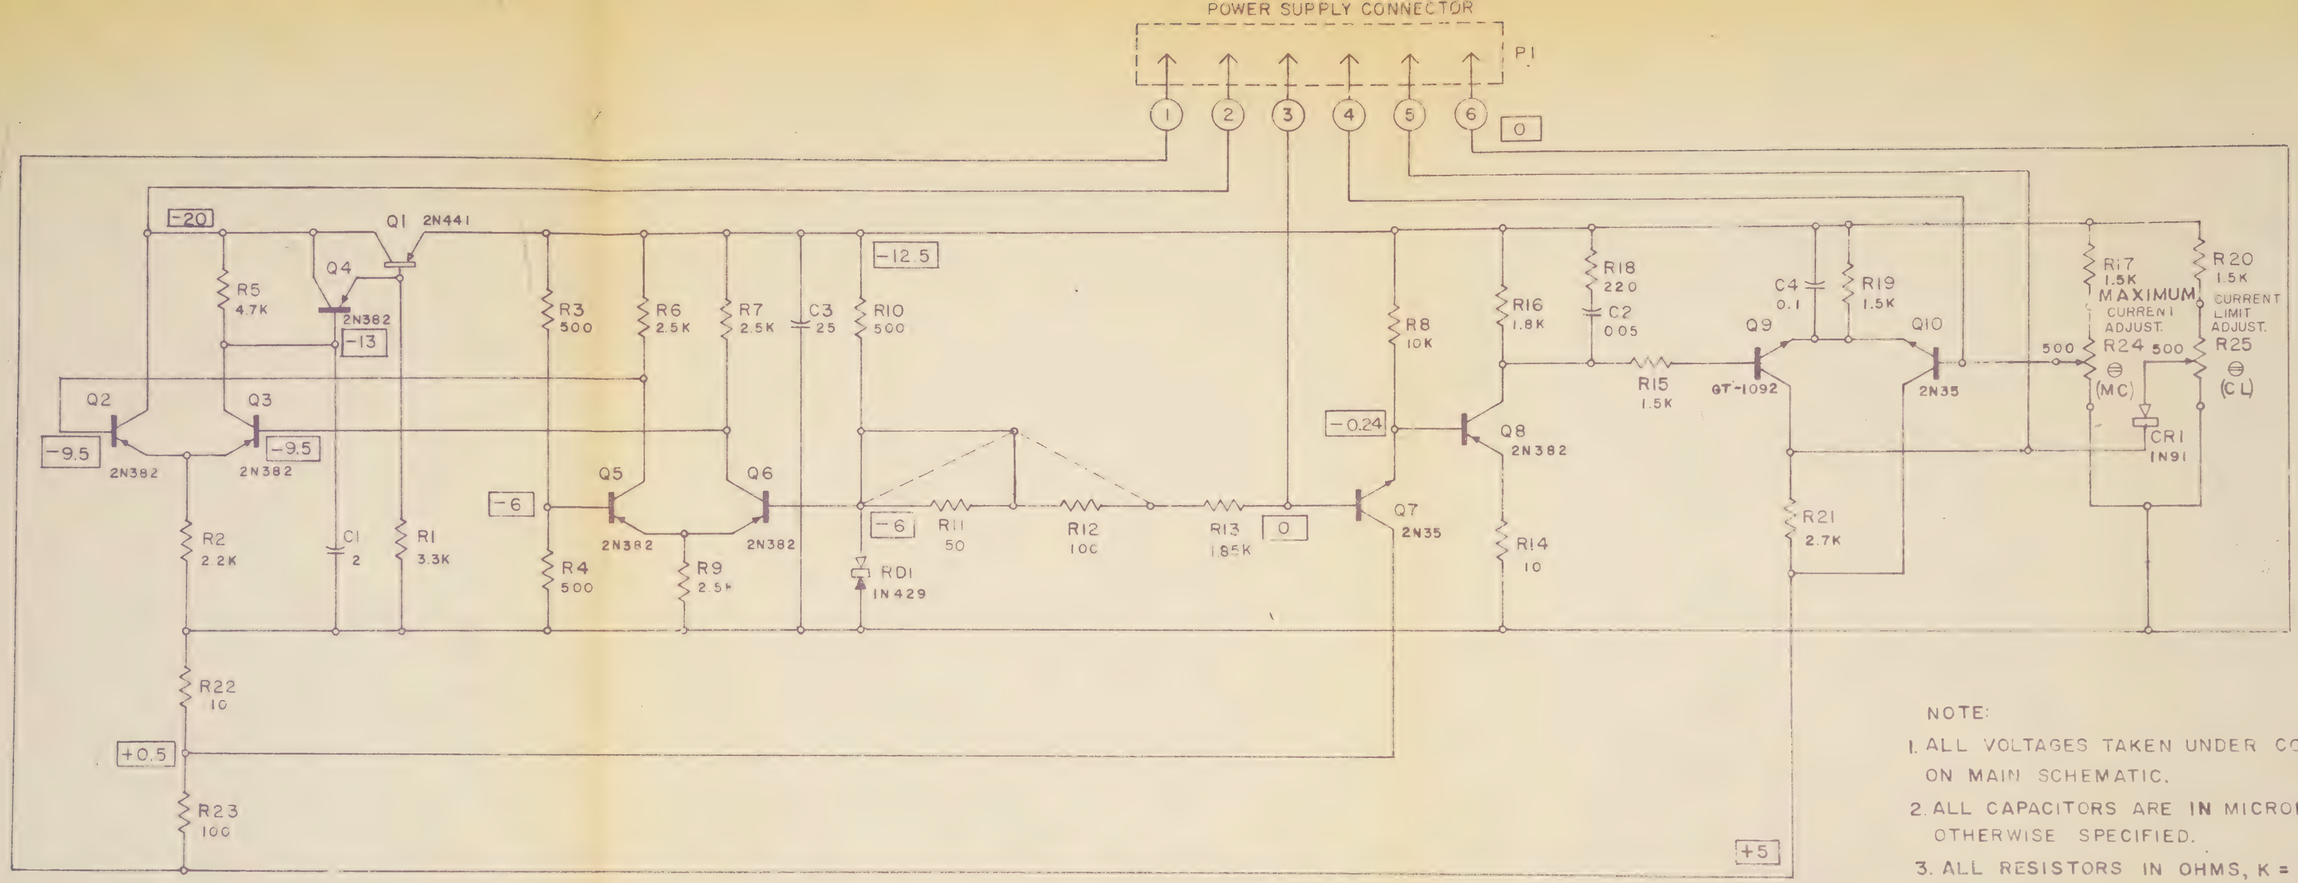

NOTE:

1. ALL VOLTAGES TAKEN UNDER CONDITIONS SPECIFIED ON MAIN SCHEMATIC.
2. ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
3. ALL RESISTORS IN OHMS, K = 1,000 OHMS.

KEPCO LABORATORIES

FLUSHING NEW YOR

ITEM REFERENCE AMPLIFIER

MODEL TRAM-4

DWG. NO. S-TRAM-4-01

APPD. 10-24-

DRWN A.A.L

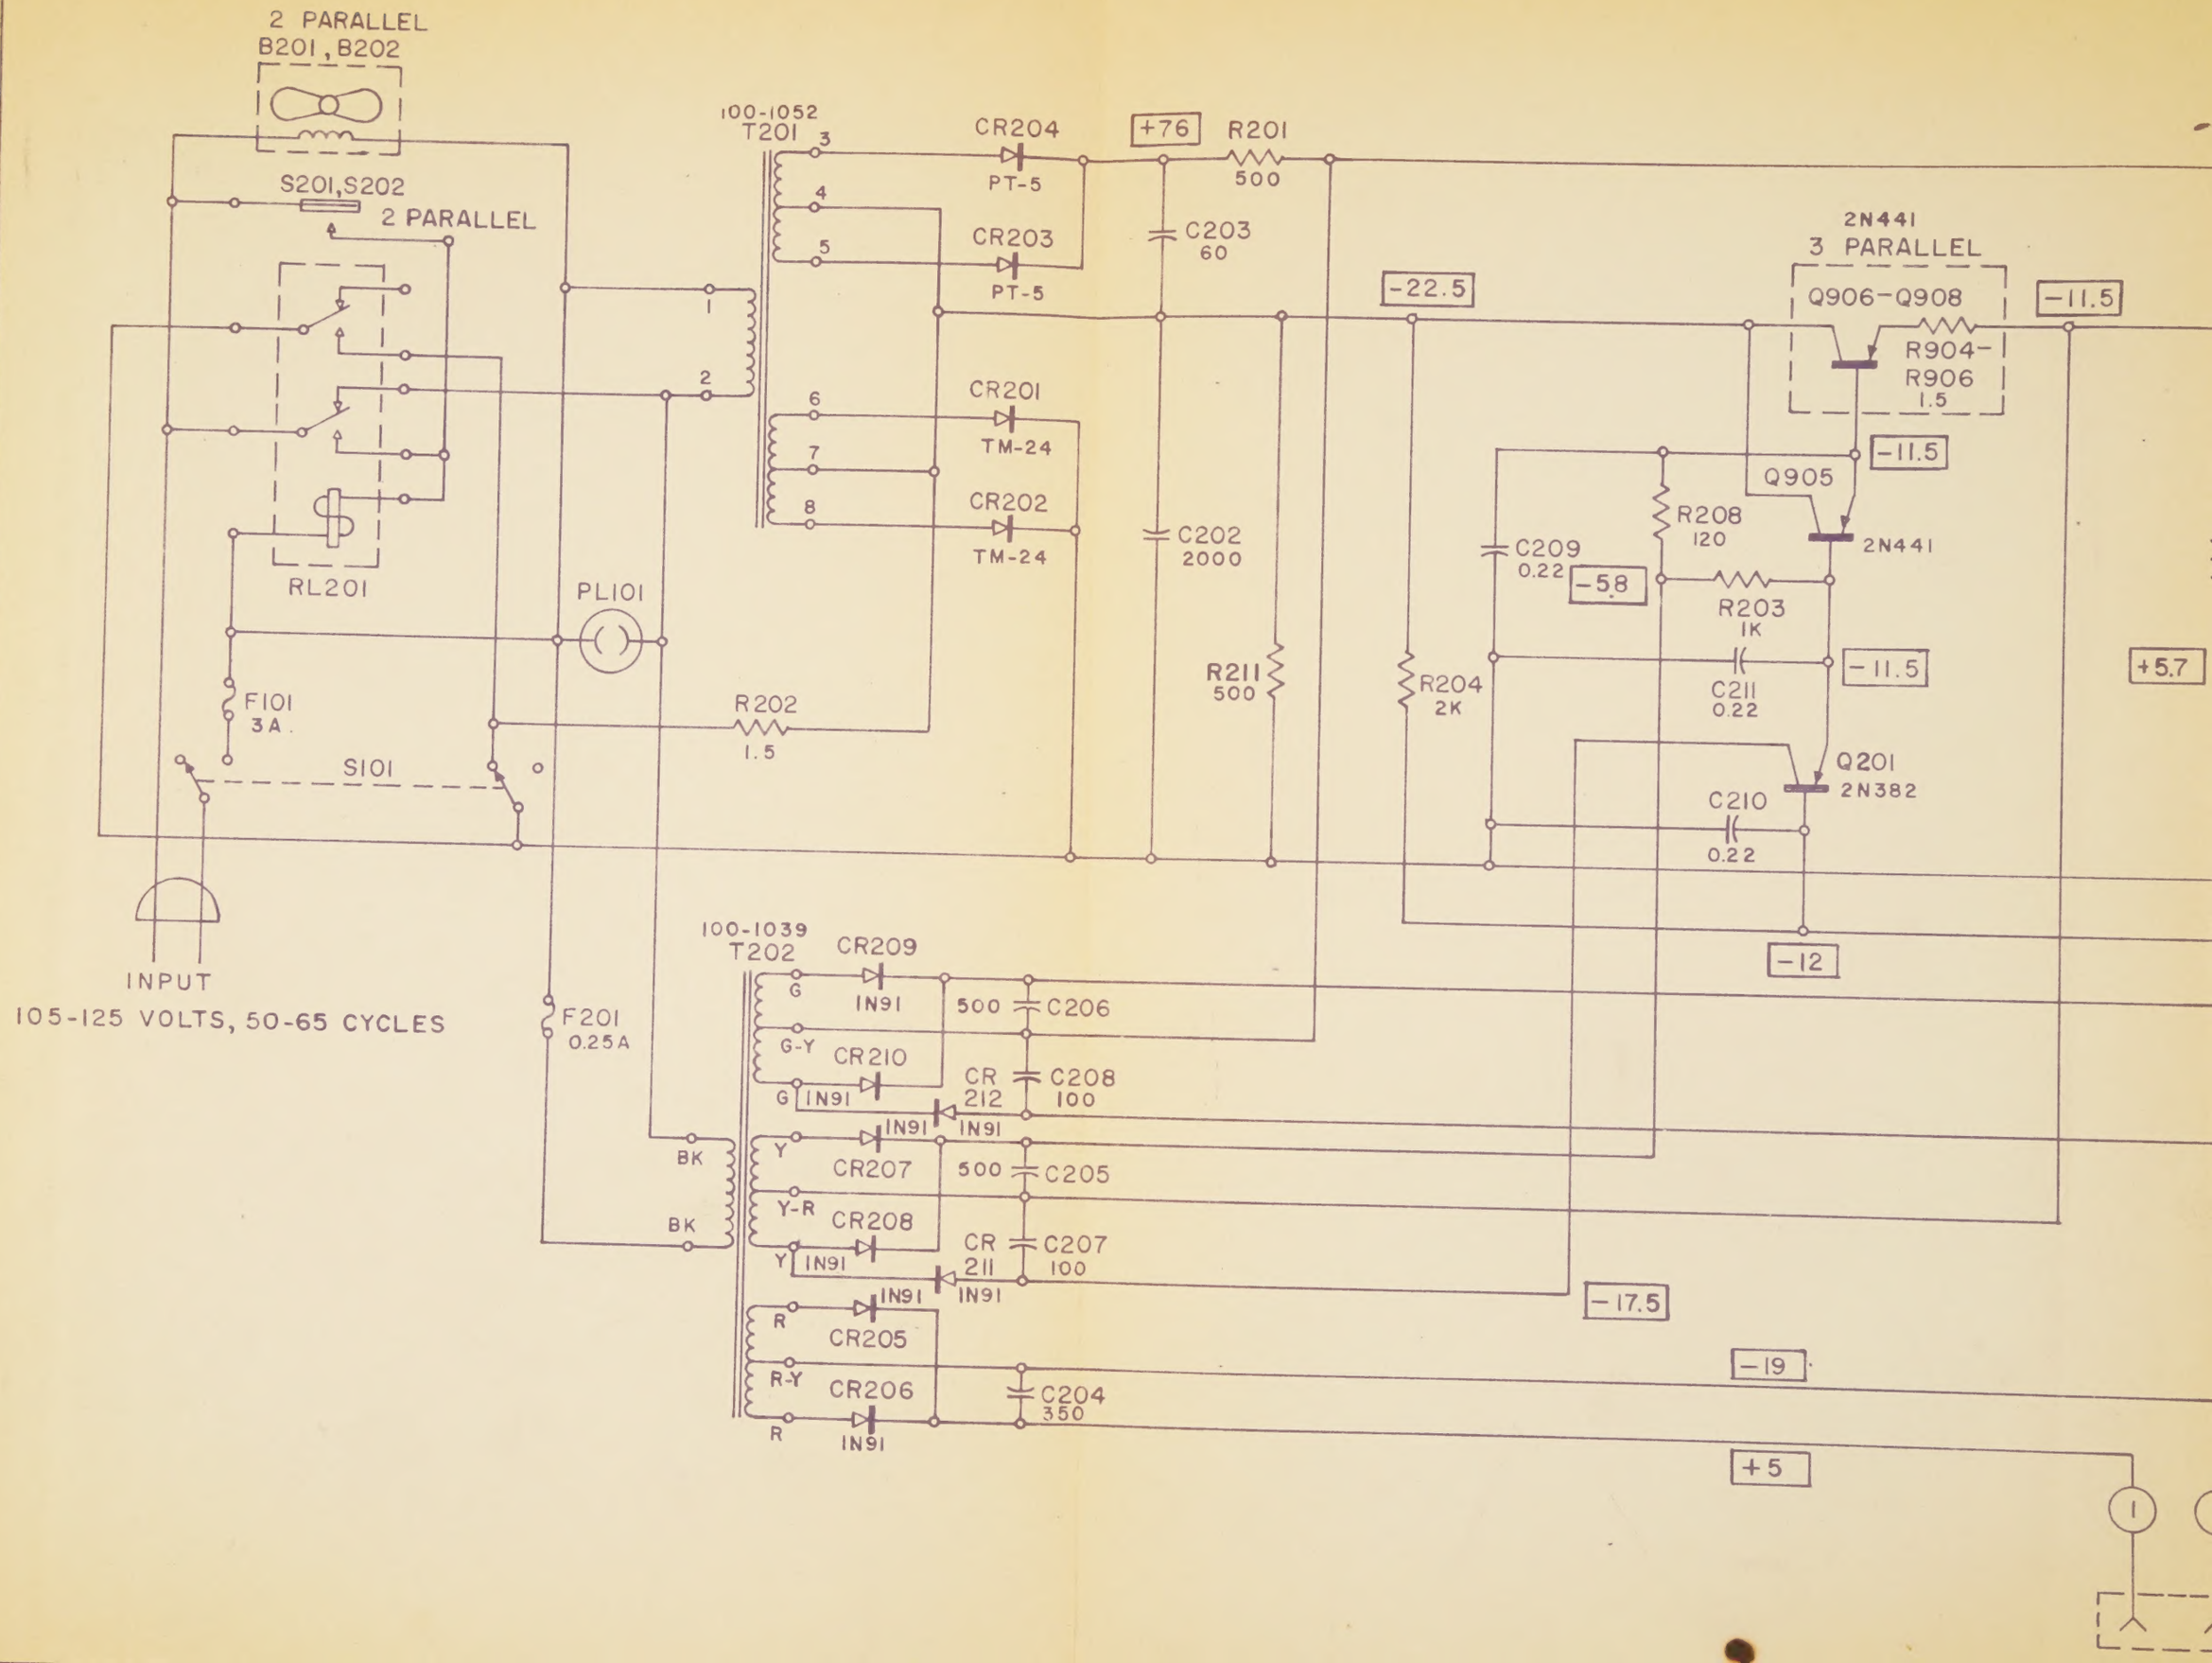
2 PARALLEL
B201, B202
S201, S202
2 PARALLEL
RL201
PL101
F101
3A
S101
INPUT
105-125 VOLTS, 50-65 CYCLES
F201
0.25A
R202
1.5
100-1052
T201
CR204
PT-5
CR203
PT-5
CR201
TM-24
CR202
TM-24
+76
R201
500
C203
60
C202
2000
R211
500
-22.5
2N441
3 PARALLEL
Q906-Q908
R904-
R906
1.5
-11.5
Q905
2N441
R208
120
C209
0.22
-5.8
R203
1K
C211
0.22
R204
2K
-11.5
+5.7
Q201
2N382
C210
0.22
-12
100-1039
T202
CR209
IN91
500
C206
CR210
IN91
CR
212
IN91
C208
100
IN91
CR207
500
C205
CR208
IN91
CR
211
IN91
C207
100
IN91
CR205
CR206
IN91
C204
350
-17.5
-19
+5
BK
BK
G
G-Y
G
Y
Y-R
Y
R
R-Y
R

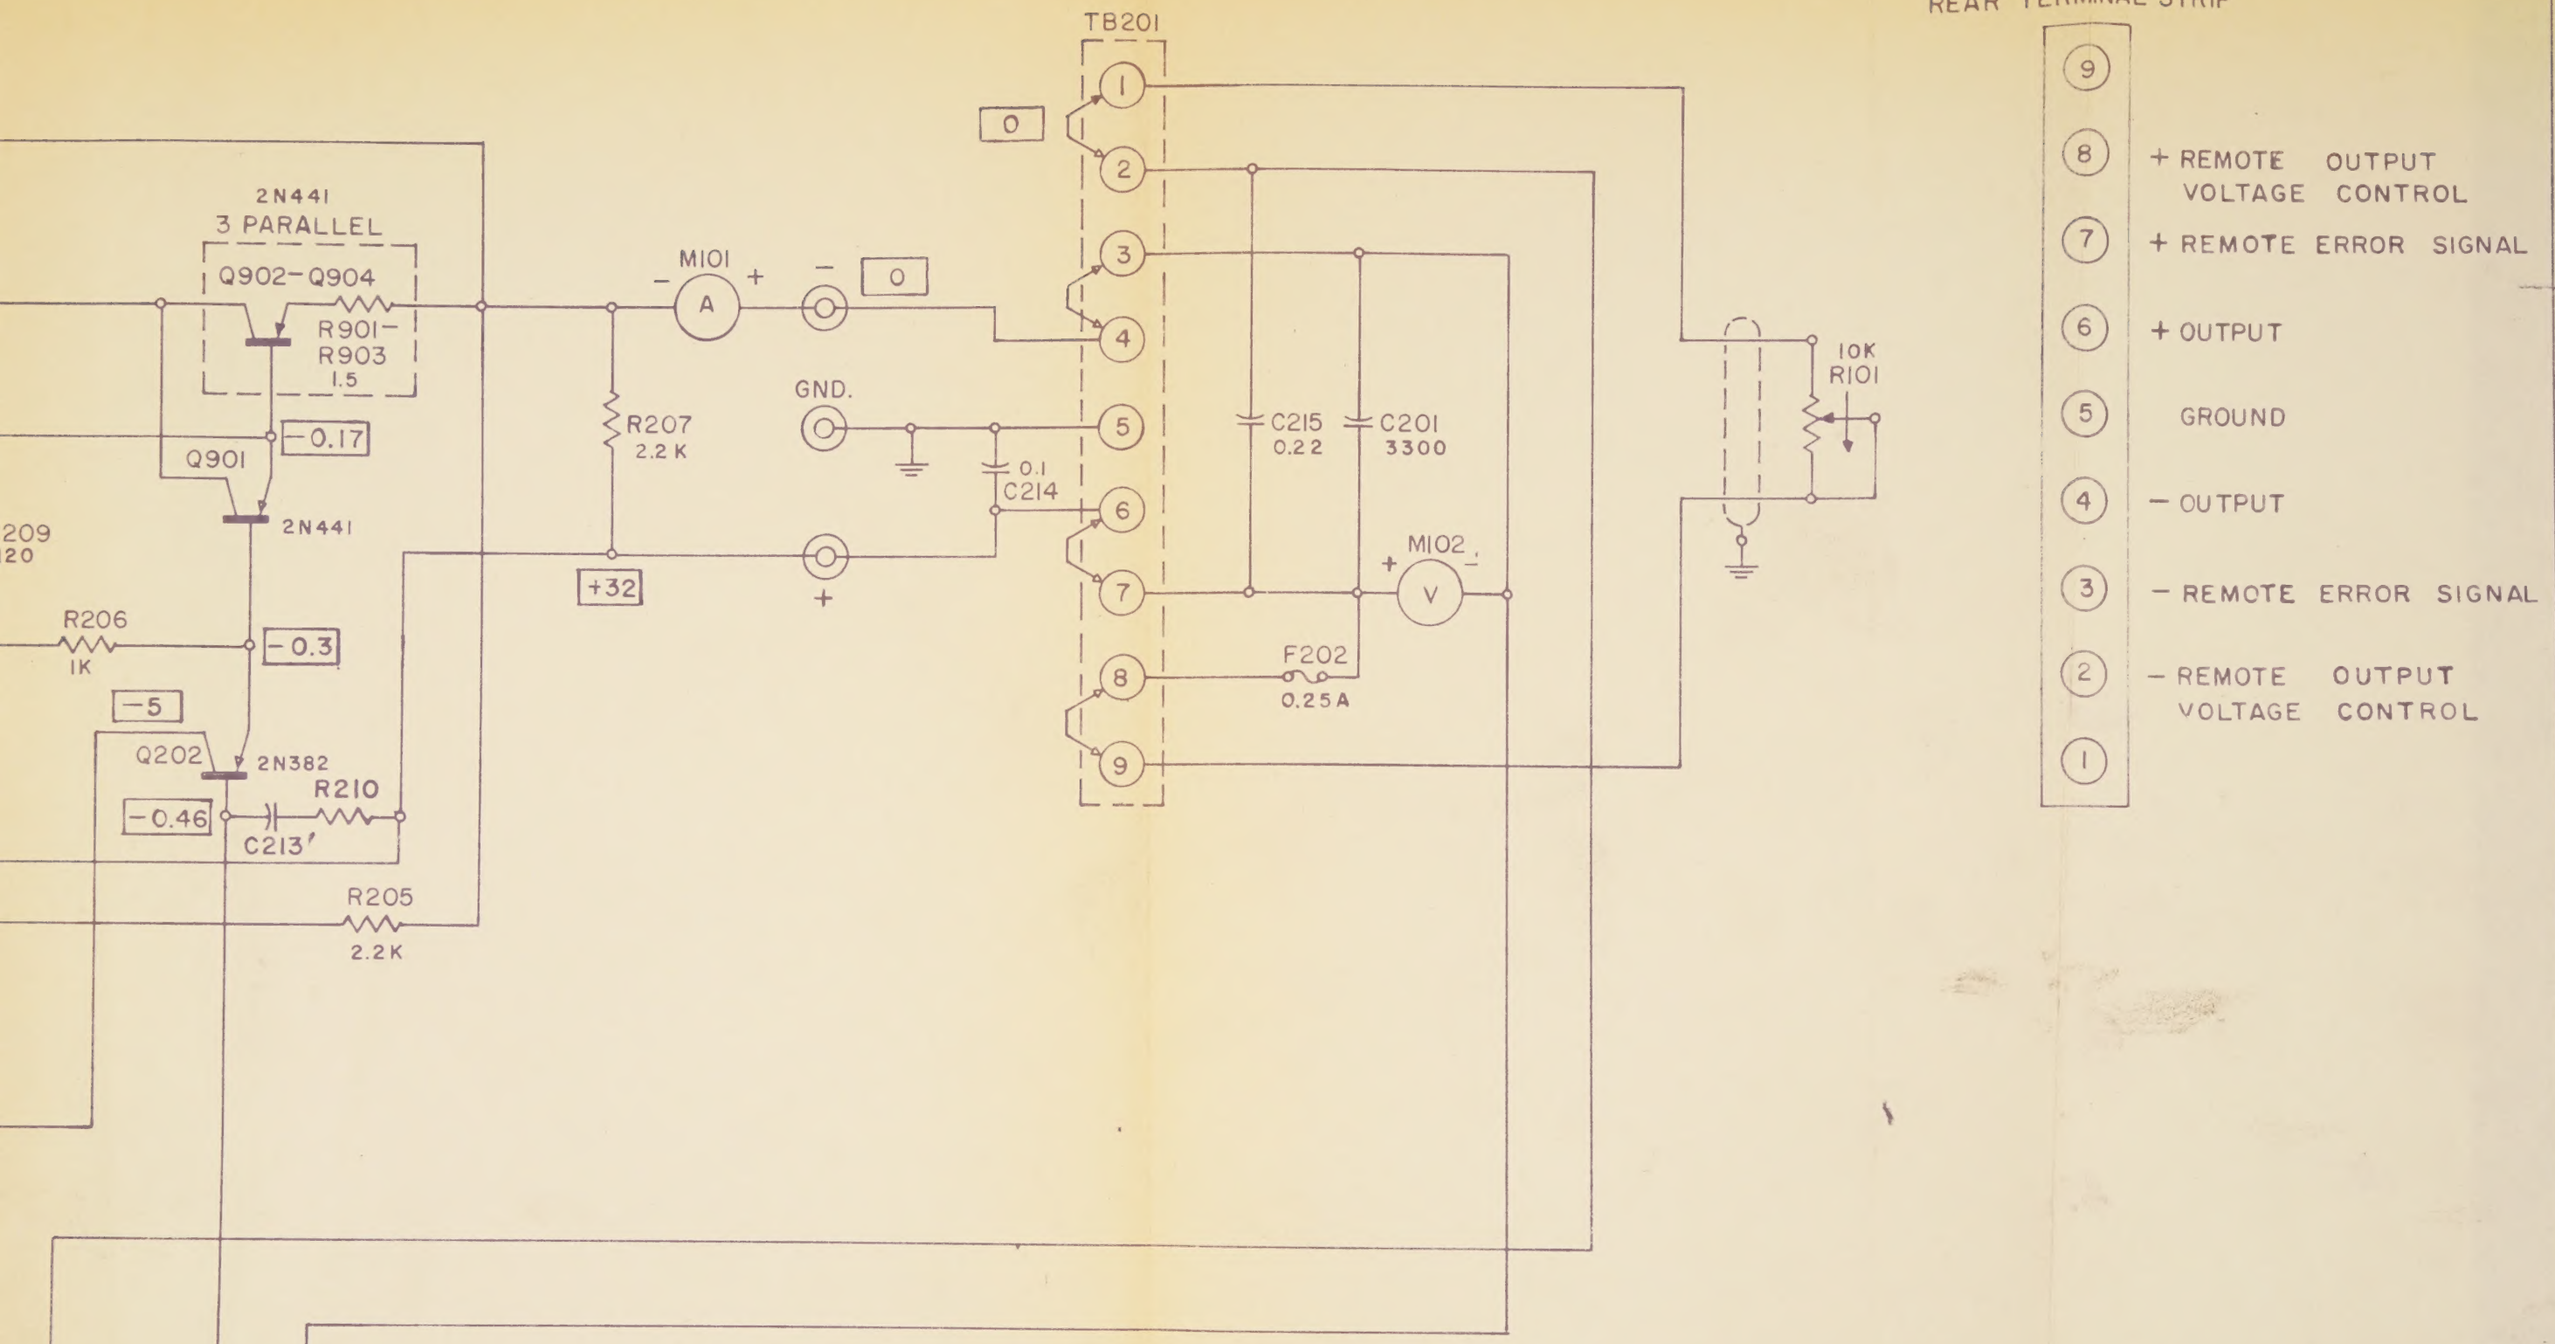

NOTE:

1. ALL VOLTAGES TAKEN UNDER FOLLOWING CONDITIONS:
   - A. AC INPUT = 115 V.
   - B. NO LOAD WITH OUTPUT SET TO MAXIMUM RATED VALUE.
   - C. VOLTAGES MEASURED AT 20,000Ω / VOLT WITH RESPECT TO NEGATIVE OUTPUT TERMINAL, UNLESS OTHERWISE NOTED.
   - D. ALL OUTPUT JUMPERS IN PLACE AS SHOWN.
2. ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.

KEPCO LABORATORIES

FLUSHING NEW YORK

ITEM: POWER UNIT	DES: dr
	APPD: AAR 8-21-58
MODEL: SC-32-1.5	DFTM: W.S.
DWG. NO.: C-SC-32-1.5-02	CHKD: E.M.

131-38 SANFORD AVENUE • FLUSHING, N.Y. 11352 • Phone (212) IN 1-7000
TWX# 212-539-6623 • Cable Address: KEPCOPOWER NEWYORK

#146-0045-10/63-12M